



Standalone Smoke Detector User Manual

COPYRIGHT ©2018 Hangzhou Hikvision Digital Technology Co., Ltd. ALL RIGHTS RESERVED. Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be "Hikvision"). This user manual (hereinafter referred to be "the Manual") cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

About this Manual
The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website (http://overseas.hikvision.com/en/). Please use this user manual under the guidance of professionals.

HIKVISION Trademarks Acknowledgement and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer
TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS, AND HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION,

DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDED TIMELY TECHNICAL SUPPORT IF REQUIRED. SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES. IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

EN 50130-4-2011+A1: 2014;
EN61000-6-3:2007+A1:2011;
EN61000-3-2:2014;
EN61000-3-3:2013;
EN60950-1:2006+A11-2009+A1:2010+A12:2011+A2:2013;
EN300 220-1 V3.1.1:2017;
EN300 200-2 V3.1.1:2017;
EN 62479:2010;
EN301 489-3 V2.1.1:2017



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the RE Directive 2014/53/EU, the RoHS Directive 2011/65/EU.

EN

Appearance
Buzzer
LED Indicator/Test/Clear
Battery Cover
Tamper-proof Lock Bolt

Quick Operation
Local Registration
Registration via APP

Registration via APP
1 Log in to the APP Store and input "Hik-Connect" to search the mobile client.
2 Download and install Hik-Connect to your phone.
3 After installing, tap to run the client.
4 Power on the security control panel.

Installation place and notice
It will alarm after detect enough smoke, this product can protect our family in a certain area, please install the reasonable quantity according to the real condition.

Installation
1 Draw a horizontal/vertical line(10cm) on the required place of the ceiling/wall.
2 (Optional) Remove the tamper-proof lock bolt on the mounting plate.

Alarm and Test
The red LED will flash periodically(56s/time)when the smoke detector works properly. The buzzer will beep rapidly and the LED will flash quickly (0.4s/time) when the detector enter the alarm state or test mode.

Alarm Clearing
You can clear the alarm only if the fire case is certainly removed. Do not disable the detector with blocking the vent or other method.

Maintenance
The detector alarm has no reaction, please check whether the detector is frequently without any smoke produced.

Trouble shooting
If the detector does not work properly, please check its battery life first. Or it is influenced by dust/lampblack or other dirt, please clean your device according to the section of "Routine maintenance".

FR

Apparence
Buzzer
Voyant/Test/ Effacement
Couvercle de la batterie
Bouton de verrouillage inviolable

Fonctionnement rapide
Inscription locale
Inscription via l'application
1 Téléchargez et installez Hik-Connect sur votre téléphone.
2 Après l'installation, appuyez sur pour exécuter le client.

Emplacement d'installation et avis
L'alarme se déclenchera après la détection d'une quantité suffisante de fumée. Cet appareil est capable de protéger votre famille dans une zone particulière, veuillez installer le nombre recommandé d'appareils en fonction des conditions de site.

Installation
1 Tracez une ligne horizontale/verticale (10 cm) à l'emplacement désigné au plafond/sur le mur.
2 (Facultatif) Retirez le boulon du verrou anti-sabotage sur la plaque de fixation.

Alarme et test
Le voyant rouge clignote régulièrement (56 s) lorsque le détecteur de fumée fonctionne correctement. Le buzzer émettra rapidement et le voyant clignotera rapidement (0,4 s) lorsque le détecteur entre dans un état d'alarme ou en mode test.

Effacement d'alarme
Vous pouvez effacer l'alarme seulement si le boîtier incendie est retiré. Ne mettez pas le détecteur hors service en obstruant la grille ou par tout autre moyen.

Maintenance
Le détecteur déclenche une alarme lorsque la concentration de fumée est supérieure au seuil de l'alarme.

Dépannage
N'utilisez pas de solvants ou de produits de nettoyage pour nettoyer le détecteur de fumée, car si la substance pénètre dans l'appareil, cela pourrait endommager le capteur ou le circuit.

PT

Apresentação
Campainha
Indicador LED/Teste/Limpar
Tampa da bateria
Pino de bloqueio anti-invaliação

Operação rápida
Registro local
Registro pelo app
1 Entre na loja de aplicativos e digite "Hik-Connect" para pesquisar o app para celular.

Aviso e local de instalação
Ele irá emitir um alarme quando detectar fumaça suficiente. Este produto protege nossa família apenas em uma determinada área, portanto, instale uma quantidade razoável de detectores de acordo com a condição real.

Instalação
1 Desenhe uma linha horizontal ou vertical de 10 cm no local desejado no teto ou parede.
2 Opcional: remova o pino de bloqueio anti-invaliação da placa de montagem.

Alarme e teste
O LED vermelho piscará periodicamente a cada 56 segundos quando o detector de fumaça estiver funcionando adequadamente. A campainha emitirá bipes rápidos e o LED piscará rapidamente em intervalos de 0,4 segundos quando o detector entrar no estado de alarme ou no modo de teste.

Limpeza
Você poderá limpar o alarme somente se o caso de incêndio for removido. Não desabilite o detector bloqueando sua ventilação ou por qualquer outro método.

Mantenção
O detector dispara um alarme quando a concentração de fumaça estiver acima do limite do alarme.

Solução de problemas
Se o detector não funcionar corretamente, verifique primeiro a duração da bateria. Ou se ele não foi influenciado por pó, fuligem ou outros sólidos.

