



CONFIGURACION 1 FRENTE A 1 PANTALLA PRINCIPAL Y 1 PANTALLA COMO EXTENSION


Frente (Intercom - ID Configuration)

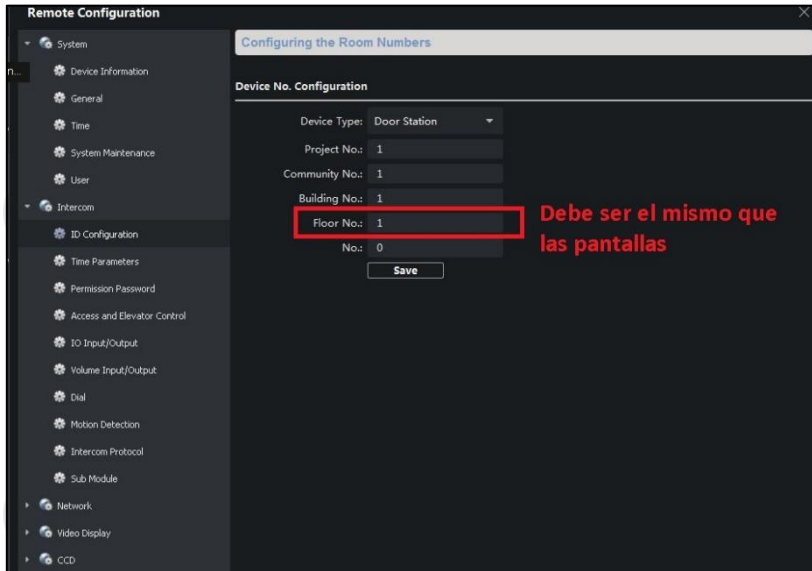


Frente (Intercom - Dial)

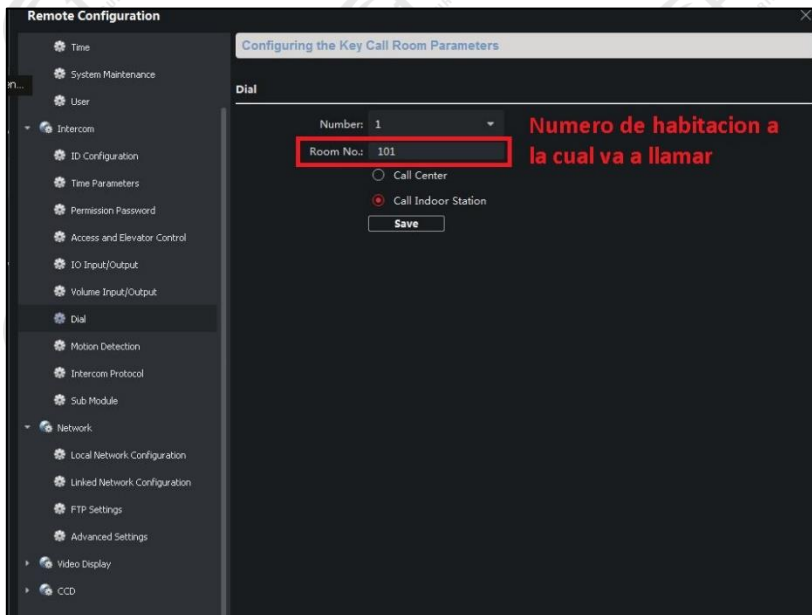


Front (Network - Local Network Configuration)

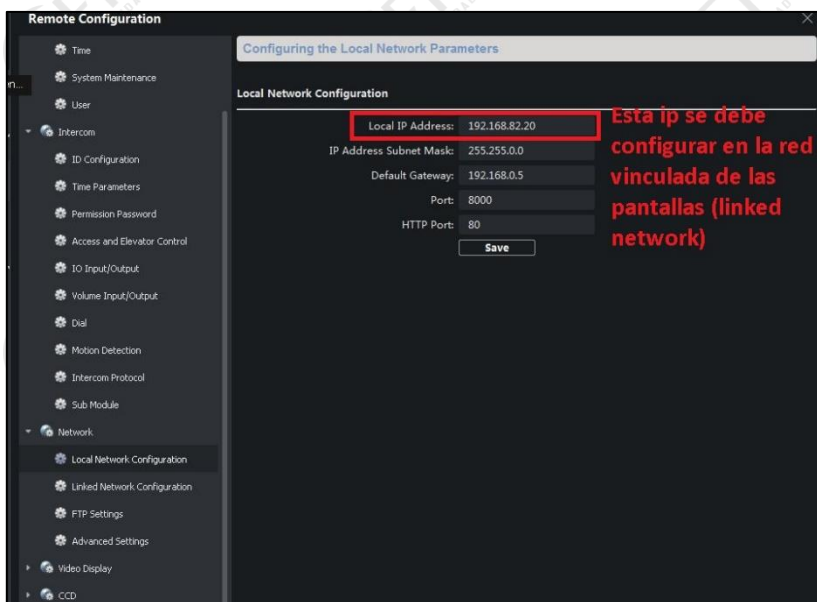


Main Screen (Intercom - ID Configuration)

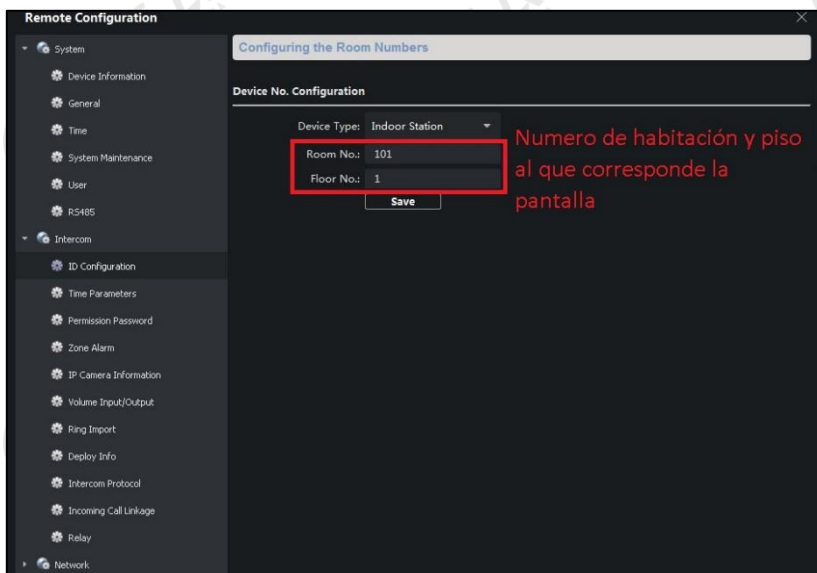


Pantalla principal (Intercom - Time Parameters)

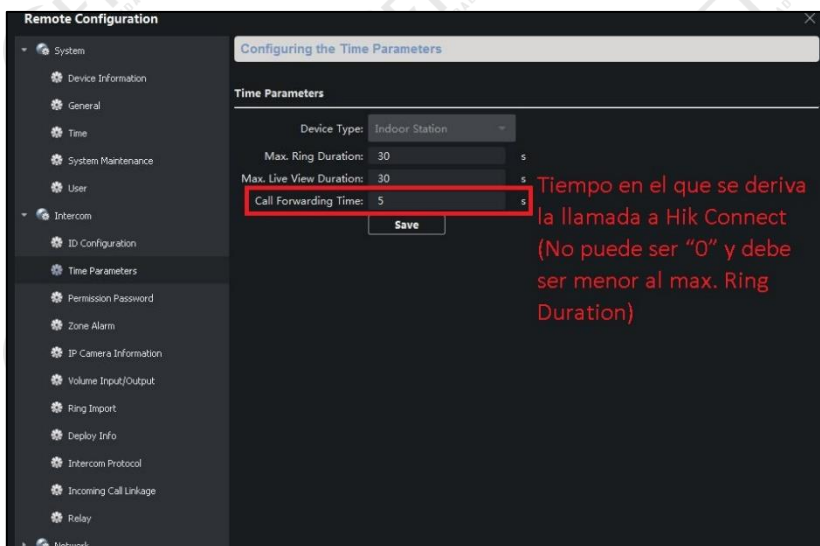


Pantalla principal (Network - Local Network Configuration)

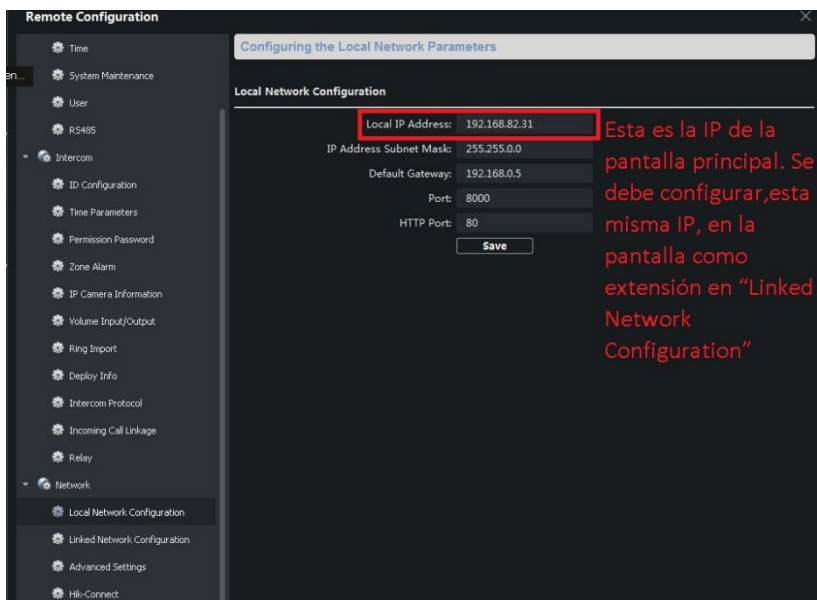


Pantalla principal (Network - Linked Network Configuration)

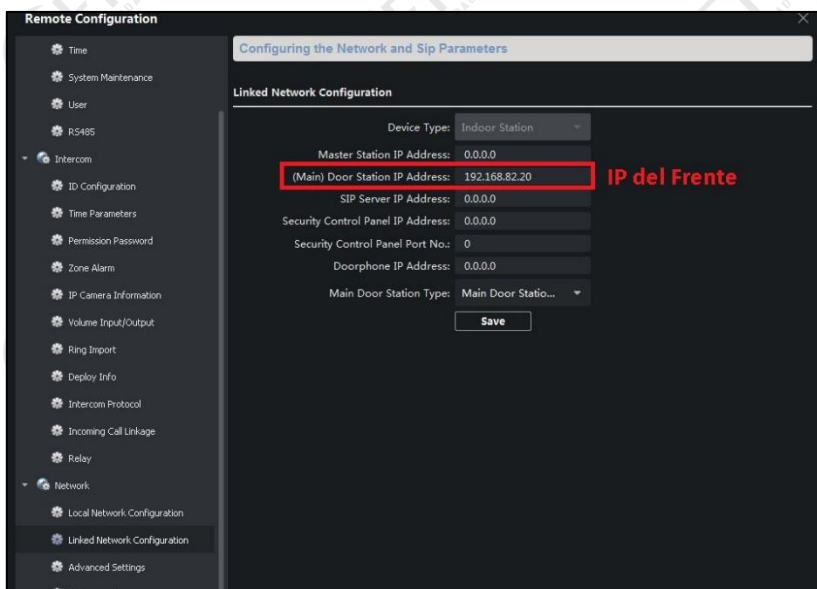


Pantalla principal (Network - Hik-Connect)

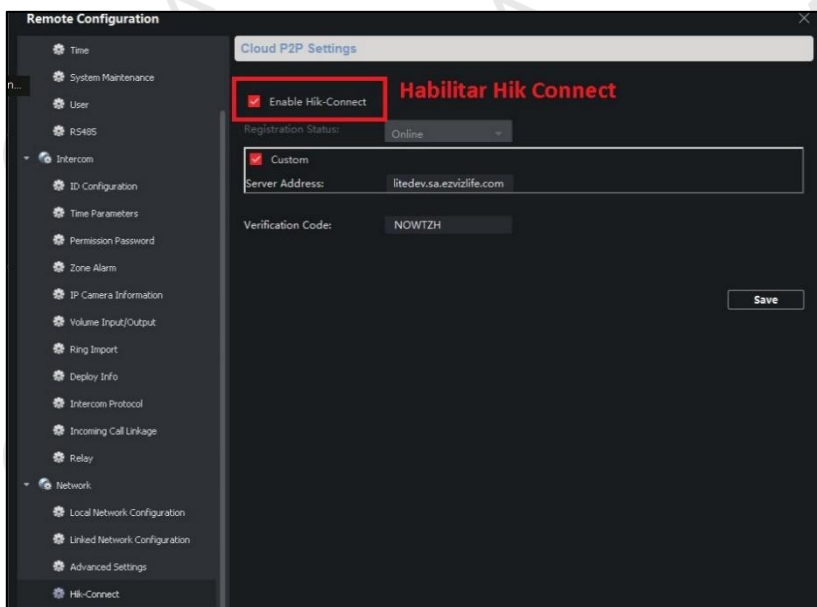


Pantalla extensión (Intercom - ID configuration)

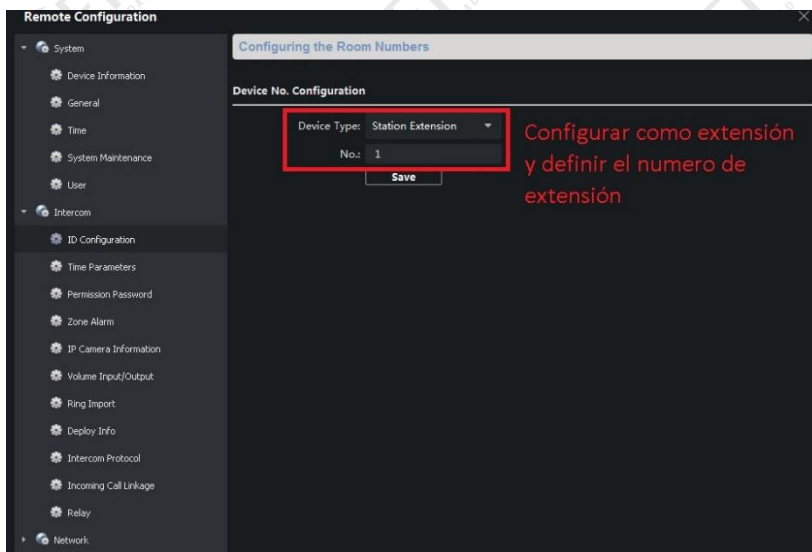

Pantalla extensión (Intercom - ID configuration)

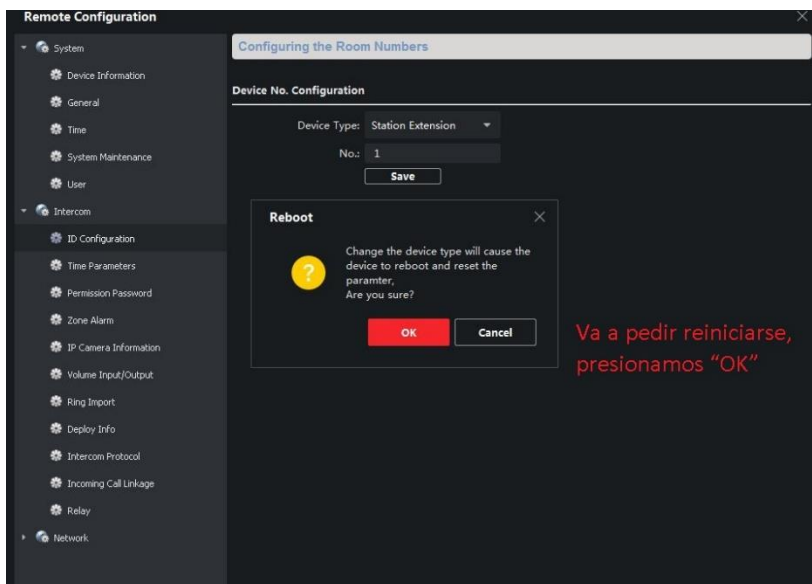

Pantalla extensión (Network - Linked Network Configuration)

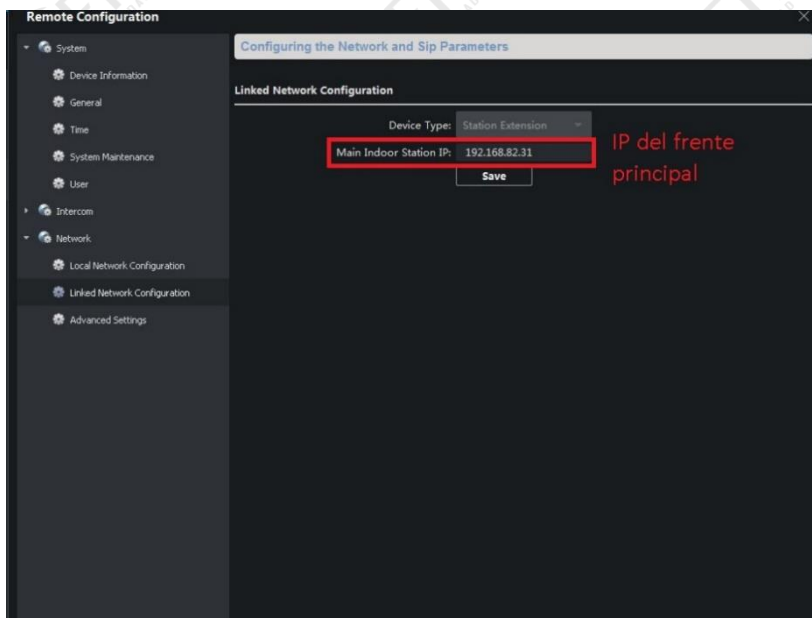

- * Para el ejemplo se usó un DS-KD8003-IME1 y dos DS-KH6320-TE1.
- * Al finalizar de configuración, reiniciar los equipos.
- * La configuración se realizó con el Ivms-4200 AC.