

How to use DS-K1T502 with Mobile Phone

Title:	How to use DS-K1T502 with Mobile Phone	Version:	v1.0	Date:	14/02/2023
Product:	Access Control Te	Page:	1 of 3		

Preparation

Туре	Model	Version
Access Control Terminal	DS-K1T502	V1.7.2 build 221219 or later

How to use DS-K1T502 with Mobile Phone

Introduction

When the device is not activated, we can use the device AP hotspot connection to activate the DS-K1T502 device and connect to the device WEB for configuration operation.

1. Connection

The Wi-Fi initial password is the device serial number, for example: K49645302.

\leftarrow wlan	?
WLAN	
Network acceleration	Off >
More settings	>
CONNECTED	
AP_K49645302 Connected	() :
AVAILABLE	0
HIKVISION_90CD Encrypted (requires login/authorization)	() "
HIKVISION Open (requires login/authorization)	(((°
TP-LINK_5DFC Open (no Internet access)	
AP10041877 Encrypted	():
AP_J76018254 Encrypted	() 3
AWHST_DZ_01	() :

Title:	How to use DS-K1T502 with Mobile Phone	Version:	v1.0	Date:	14/02/2023
Product:	Access Control Te	Page:	2 of 3		

2. Activate the device

Activating the device requires setting a password, and subsequent connections need to use this password to connect to the hotspot.

X 🛈 www.localhost.com	::
Activation Please select.	1
User Name admin	
Password	8
Confirm Password	2
Activation	
When using the product, please respect the pr and other rights of others.	ivacy

3. WEB configuration

You can click on Settings in the upper left corner to enter the configuration page.

Hello, welcome.	< Configuration
Door Status	System
	System Settings
	User Management
Controlled	Network
	Communication Settings
Unlock Closed Remain Remain Open Closed	Network Service >
Shortcut Entry	Device Access
Person Management	Person Management
Smart	Event Search
Authentication Settings	Audio >
Door Parameters	Access Control
	Intercom

Title:	How to use DS-K1T502 with Mobile Phone	Version:	v1.0	Date:	14/02/2023
Product:	Access Control Te	Page:	3 of 3		

Note:

1. After 30 min after device powering on, the hotspot function will be disabled automatically. Hold key 5 on the device keypad for 10 s to enable/disable the hotspot function.



2. The default factory is to enable the AP, if not enabled, you can enable it through the browser WEB side. After device activation, the hotspot password will be changed to the device activation password.

HIKVI.							≮ ⊥ () admin ∨
兩	Local		TCP/IP	WI-FI	Device Hotsp	ot Bluetooth	
Overview	System	~					
<u>^</u>	Network	^		Enable [Device Hotspot		
Management	Network Settings				*Name		
Event Search	Network Service					Save	
	Device Access						
Management	Video/Audio						
Configuration	Image						
F	Event	~					
Maintenance and Security	Access Control						
	Intercom						
	Card Settings						
	Security						
	Smart						

