


Quick Start Guide

SpeedFace - V5L/H5L[P]

Version: 1.0

Device Installation

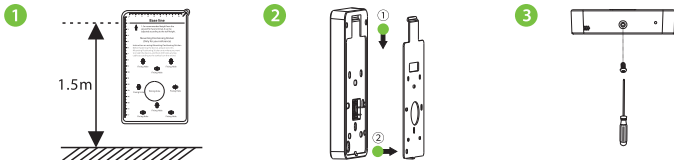

- ① Attach the mounting template sticker to the wall, and drill holes according to the mounting paper. Fix the back plate on the wall using wall mounting screws.
- ② Attach the device to the back plate.
- ③ Fasten the device to the back plate with a security screw.

● Installation Environment

Please refer to the following recommendations for installation.



INDOOR USE



KEEP DISTANCE



AVOID GLASS
REFRACTION




AVOID DIRECT
SUNLIGHT AND EXPOSURE





KEEP EFFECTIVE
DISTANCE 0.3-2m

Standalone Installation

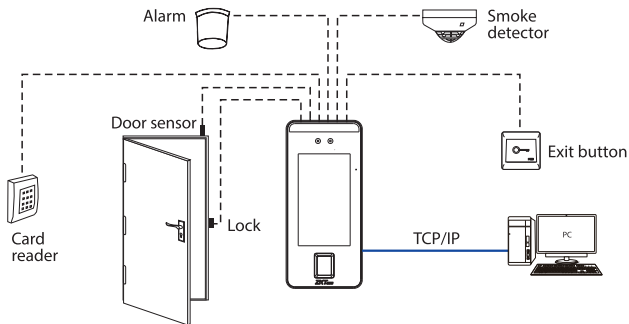

Door Sensor, Exit Button & Alarm Connection

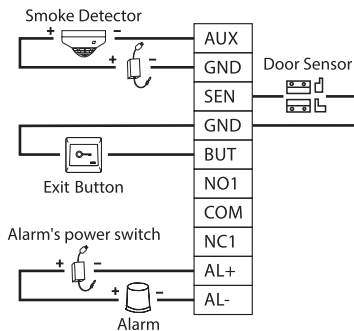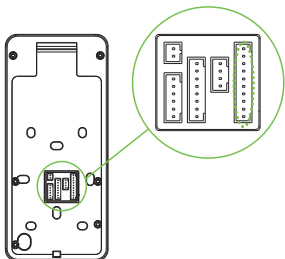


Lock Relay Connection


The system supports Normally Opened Lock and Normally Closed Lock.

The NO LOCK (normally opened at power on) is connected with 'NO1' and 'COM' terminals, and the NC LOCK (normally closed at power on) is connected with 'NC1' and 'COM' terminals. Take NC Lock as an example below:



1) Device not sharing power with the lock

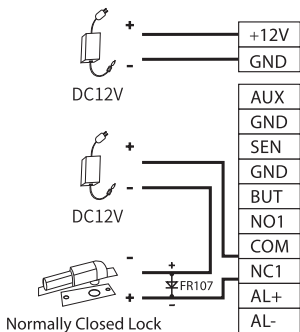



2) Device sharing power with the lock

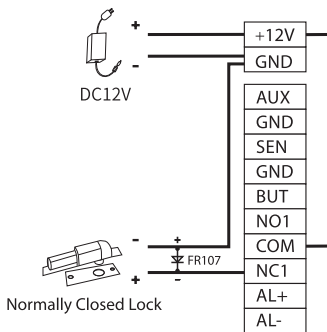



RS485 and RS232 Connection

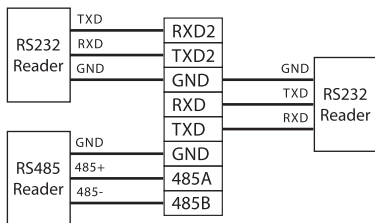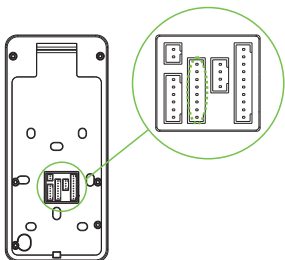

Wiegand Reader Connection

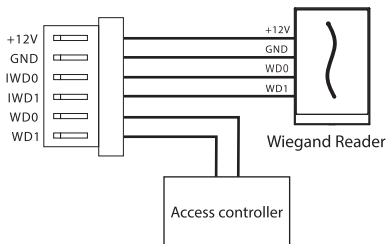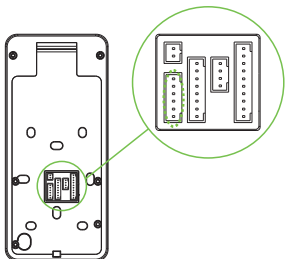


Power Connection

 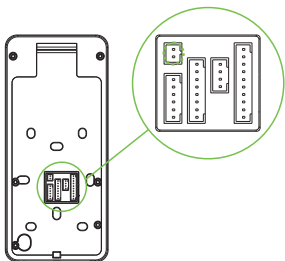


Recommended power supply

- 1) 12V \pm 10%, at least 3000mA.
- 2) To share the power with other devices, use a power supply with higher current ratings.

Ethernet Connection

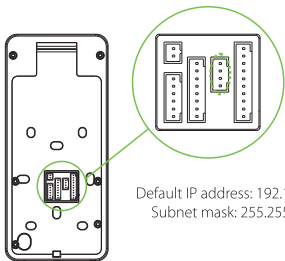

 Default IP address: 192.168.1.201
Subnet mask: 255.255.255.0



IP address: 192.168.1.130
Subnet mask: 255.255.255.0

Click [COMM.] > [Ethernet] > [IP Address], input the IP address and click [OK].






Note: In LAN, IP addresses of the server (PC) and the device must be in the same network segment when connecting to ZKBioAccess software.

User Registration

When there is no super administrator set in the device, click on ☰ to enter the menu. After setting the super administrator, the system will request for the administrator's verification before entering the menu. For the security purpose, it is recommended to register a super administrator at the first time you use the device.

Method 1: Register on the device

Click on ☰ > [User Mgt.] > [New User] to register a new user. Settings include entering user ID and name, registering a palm, fingerprint, face, password, badge (optional) and user photo, setting user role.

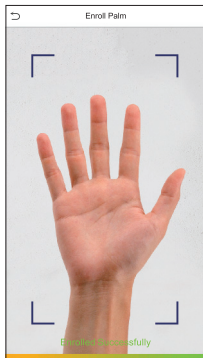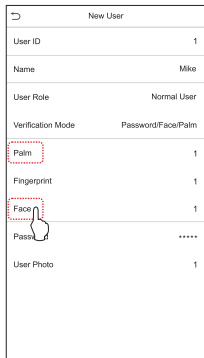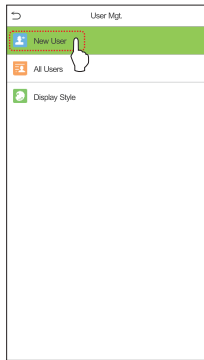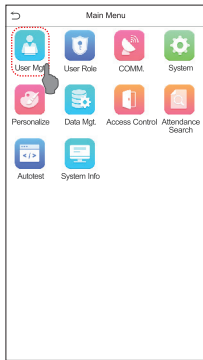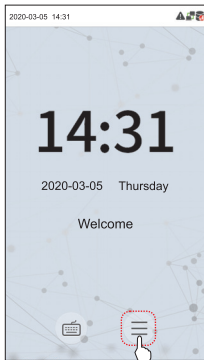

Method 2: Register on ZKBioAccess software

Please set the IP address and cloud service server address on the device.

1. Click [Access] > [Access Device] > [Device] > [Search Device] to add the device to the software.

When the device has set the server address and port, it can be added automatically.

The screenshot shows the 'Search Device' window in the ZKBioAccess software. The search bar at the top contains the text 'No device found? Download Search Tools to Local Disk'. Below the search bar, there is a progress bar labeled 'Total Progress' which is at 100%. A table below the progress bar shows the search results for one device:

IP Address	MAC Address	Subnet Mask	Gateway Address	Serial Number	Device Type	Set Server	Operation
192.168.213.79		255.255.255.0	192.168.213.1	8882-001-0000	ProLighting-1		Add

An 'Add' dialog box is open in the foreground, with the following fields and options:

- Device Name: 192.168.213.79
- Icon Type: Door
- Area: Area Name
- Add to Level: [dropdown menu]
- Clear Data in the Device when Adding: [checkbox]

A warning message is displayed at the bottom of the dialog: "[Clear Data in the Device when Adding] will delete data in the device(except event record), please use with caution!". The 'Add' button in the dialog is highlighted with a green callout labeled 'Step 4'.

2. Click [Personnel] > [Person] > [New] to register users in the software.

3. Add users to access levels.


4. Click [Access] > [Device] > [Device Control] > [Synchronize All Data to Devices].

For more details, please refer to the ZKBioAccess User Manual.


Method 3: Register on the phone

Once ZKBioAccess software installed, users could enroll face via browser application on their own mobile phone.

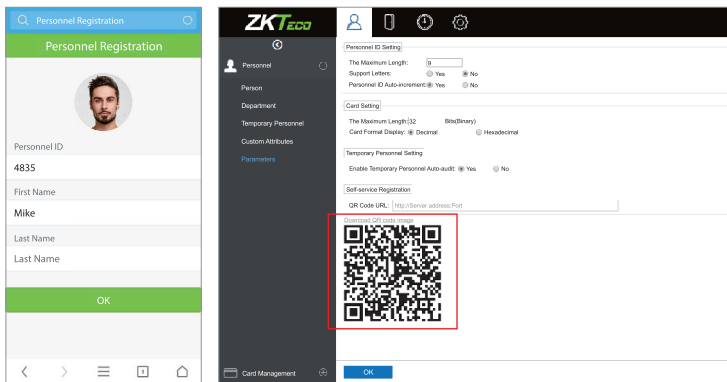

1. Click **[Personnel]** > **[Parameters]**, input “http://Server address:Port” in the QR Code UGL bar. The software will automatically generates a QR code. Scan the QR code or login onto “http://Server address:Port/app/v1/adreg” by the mobile phone to register users.



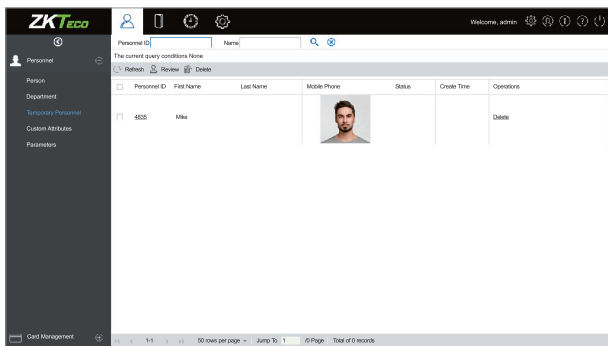




2. The users will display in **[Personnel]** > **[Temporary Personnel]**, click **[Review]**.



Ethernet and Cloud Server Settings




Click on  > [COMM.] > [Ethernet] to set the network parameters. If the TCP/IP communication of the device is successful, the icon  will be displayed in the upper right corner of the standby interface.

Click on  > [COMM.] > [Cloud Server Setting] to set the server address and server port, that is, the IP address and port number of the server after the software is installed. If the device communicates with the server successfully, the icon  will be displayed in the upper right corner of the standby interface.

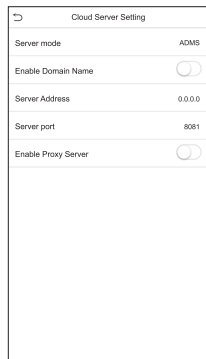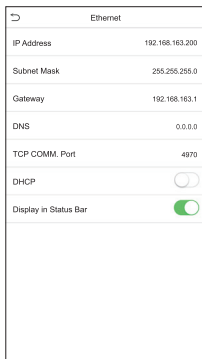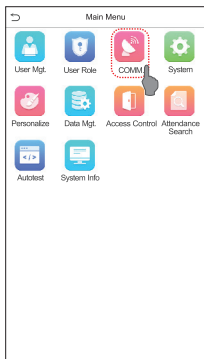


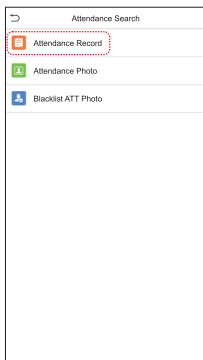
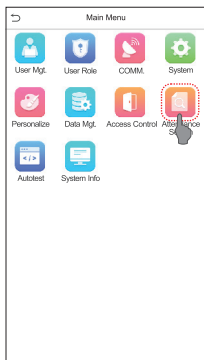
Access Control Settings

Click on  > [Access Control] to enter the access control management interface and set relevant parameters of access control.

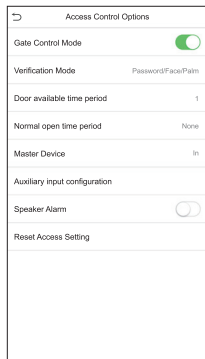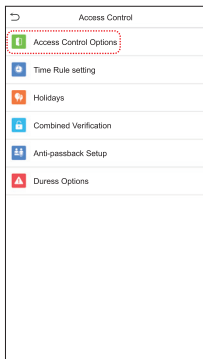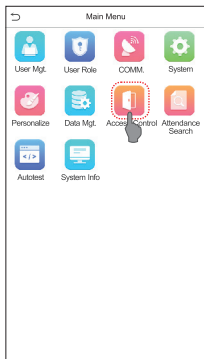

Records Query


Click on  > [Attendance Search] > [Attendance Record] to enter the records query interface, input the user ID and select the time range, the corresponding attendance logs will be displayed.



Personal Record Search

Date	User ID	Access records
03-03		Number of Records:04
	4	11:25
	2	11:25 11:22
	3	11:25
03-04		Number of Records:04
	1	11:29
	3	11:29 11:21
	2	11:28
	4	11:26
03-05		Number of Records:04
	1	11:27
	4	11:27
	3	11:27
	2	11:27

Note for Palm Registration and Verification

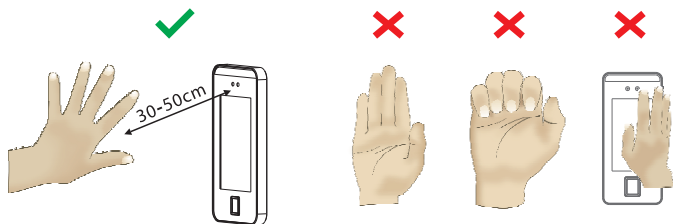

Notes:

1. Place your palm within **30-50cm** of the device.
2. Place your palm in the palm collection area, such that the palm is placed parallel to the device.
3. Make sure to keep space between your fingers.

ZKTeco Industrial Park, No. 26, 188 Industrial Road,
Tangxia Town, Dongguan, China.

Phone : +86 769 - 82109991

Fax : +86 755 - 89602394

www.zkteco.com

