



How to upgrade a wired keypad via serial port


Title:	How to upgrade a wired keyboard via serial port	Version:	v1.0	Date:	06/07/2024
Product:	Hybrid			Page:	1 of 3

How to upgrade a wired keypad via serial port


1. Use a serial cable to connect the keypad's connector to the computer.


Establishing a connection in the X-shell software.

- 1) Use a serial cable to connect the keypad's connector to the computer

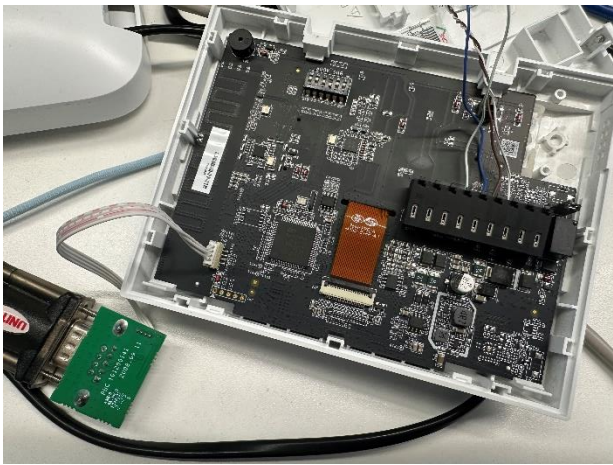


- 2) Create a new session, select the protocol type SERIAL and click on the serial port to configure it. Click to connect.

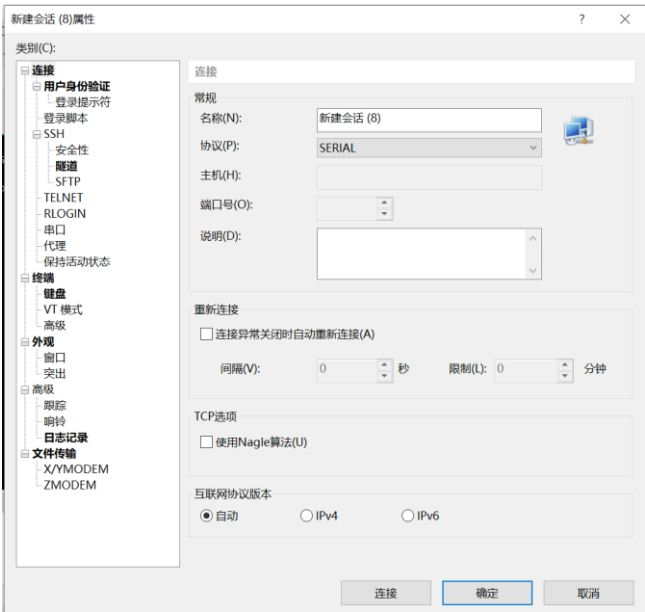

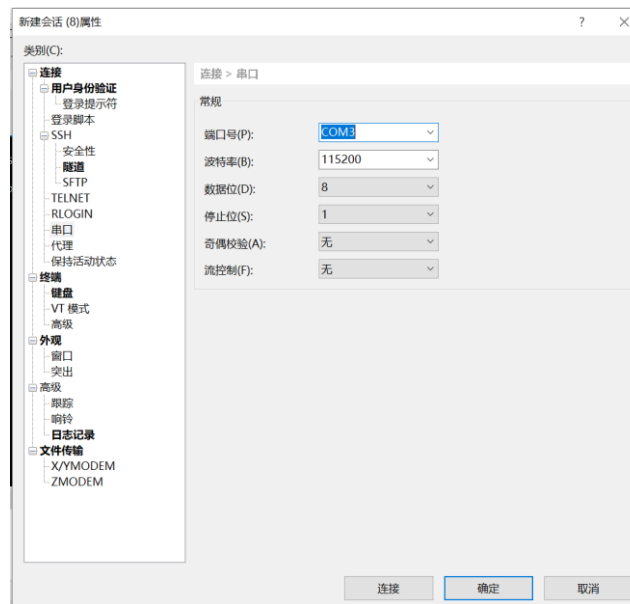


2. Enter the upgrade screen and transfer the upgrade package.


1) Long press **U** while turning on the panel. Enter this screen.

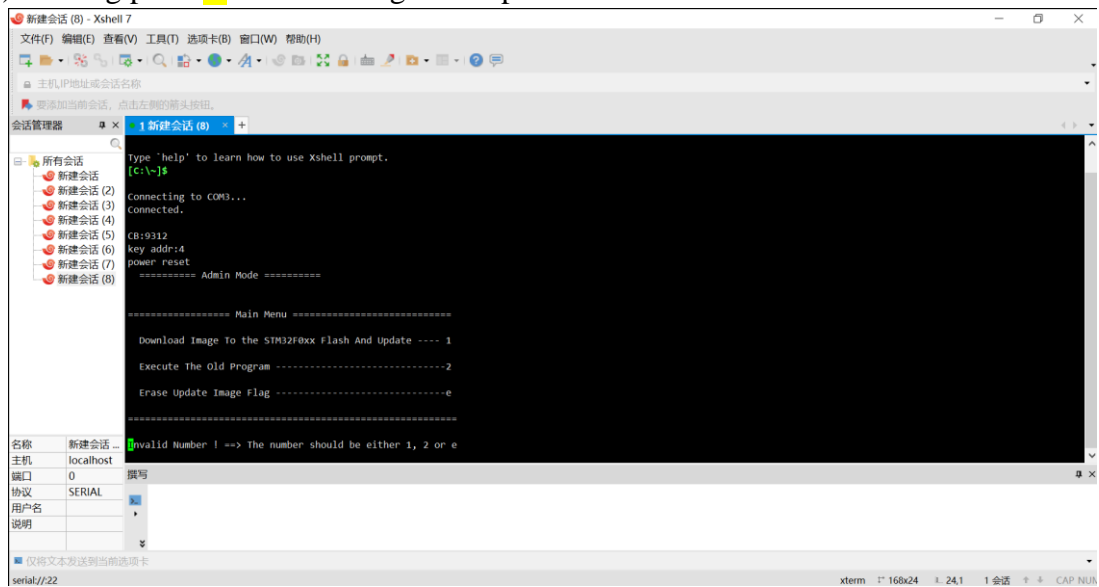


2) Press **1**, CCCC will appear all the time, which means upgrade is possible.

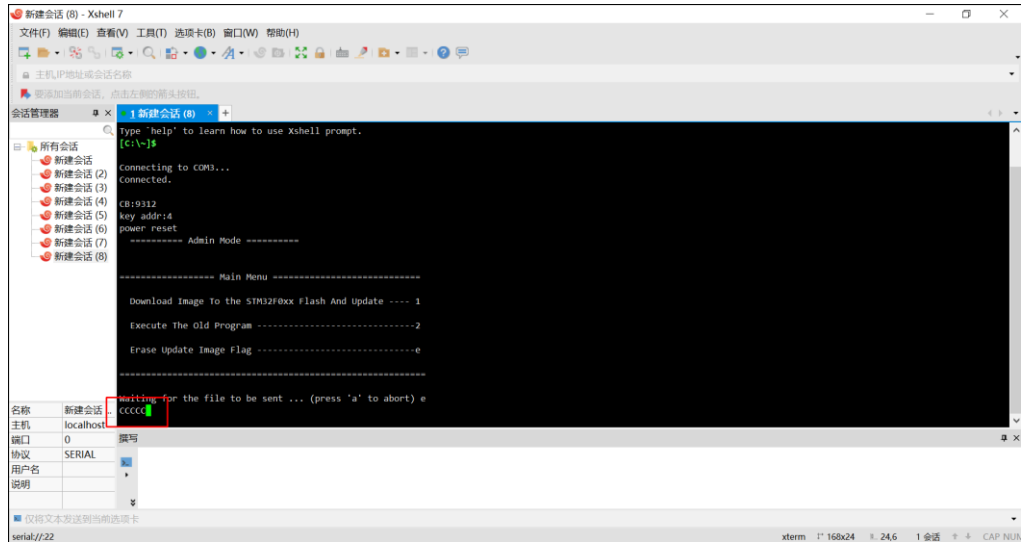


3) Click File-Transfer-YMODEM-Transfer with YMODEM in the upper left corner.

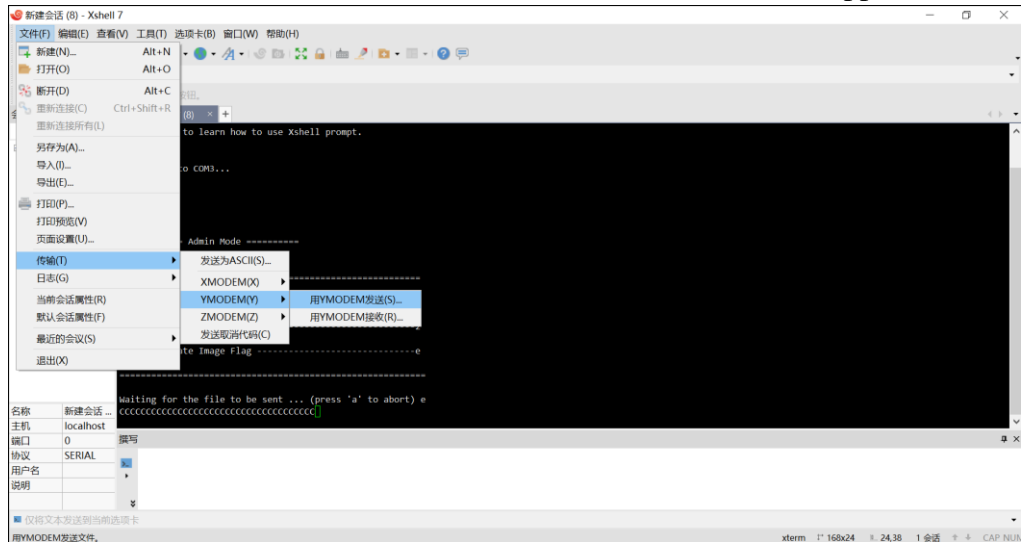

4) Select the upgrade package, click open to upgrade

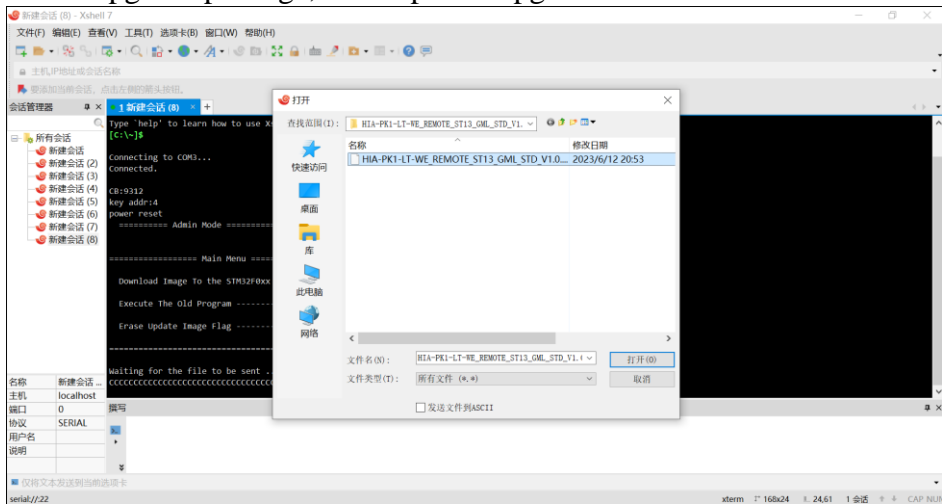

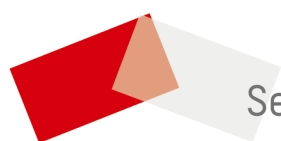

See Far, Go Further