

Sebury

K3



K4



Sebury

www.sebury.com.cn

Digital Keypad User's Manual

Sebury Technology Co., Ltd

Contents

Introduction	1
Specifications	1
Intramural Interface Circuit	3
Mounting	3
Wiring	5
Power UP	7
Engineer Programming Mode	7
Changing Master & User Codes	7
Delete User Card OR Cards	8
User Operation Mode	8
Setting Door Relay Strike time	8
Setting Alarm Signal Output Time	9
Set Door Open Detection Time	9
Setting Security Arrangement	9
Resetting to Factory default setting	10
Changing User Password Code	10
Technical Specifications	11
Package Listing	11

Thank you for using Sebury's products
 This user's manual will give you directions for the using of k3/k4
 Please read this user's manual carefully before attempting to install the k3/k4

Introduction

The K3/K4 uses the latest microprocessor technology to operate door strikes and security systems that require a momentary (timed) or latching dry contact closure.

All programming is done through the keypad. Codes and operating parameters are stored within the microprocessor and can not be lost due to power failure.

Store 1000 prox cards and user 4 digit codes. Each 4 digit code has 10,000 possible combinations. The unit has one relay with 2 Amp contacts.

Specifications

Programmable Functions

Relay latching or momentary
 Relay activate independently or together
 Change Codes 1 master, 1000 users & prox cards
 Door open detection

Programmable Timers

Door relay time 00-99 seconds
 Door open detection 00-99 seconds
 Alarm time 00-99 minutes

Wiring Connections

Electric lock

External Push Switch
Magnetic Contacts
Alarm

Keypad:

12 keys

Programming memory:

Non volatile Eeprom memory

IMPORTANT INFORMATION

There are no user serviceable parts contained within the K3 access control keypad.

If holes are to be drilled before mounting onto a wall, check for hidden cables and/or pipes before drilling. Use safety goggles when drilling or hammering in cable clips.

Every effort has been made to provide accurate information, however slight variations can occur. We also reserve the right to make changes for product improvement at any time

NOTE:

PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO INSTALL THE K3/K4

Intramural Interface Circuit

1. Alarm output interface (See Figure 1)

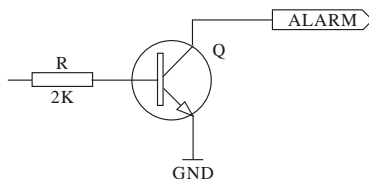


Figure 1

2. Electric lock interface (See Figure 2)

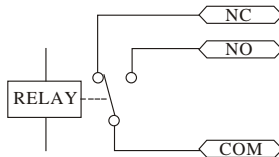


Figure 2

Mounting

1. Attach the rear plate to a single or double gang electrical box or secure to the wall firmly with at least three flat head screws.
2. When wiring has been completed, attach the front cover to the rear plate.

The front cover can be permanently secured by using the short screw supplied K3/K4

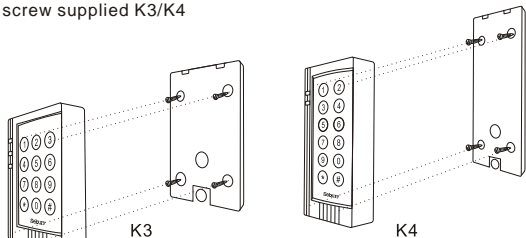
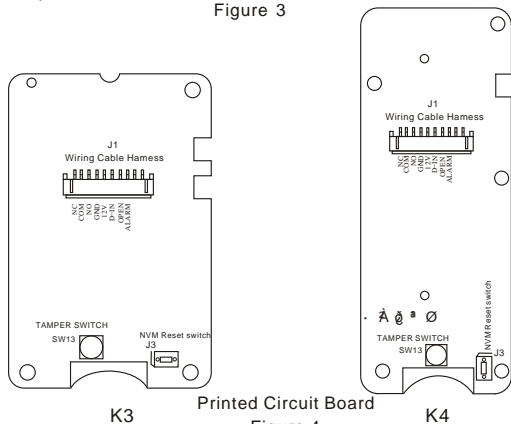


Figure 3

Printed Circuit Board
Figure 4

Wiring

Unplug the cable harness and connect the necessary cables, (See Figure 5). showed as Figure 6 for special power Supply connections, this power will make controller work stably .

Tape any wires that are unused. Plug the cable harness , (See Figure 5) Attach the front cover, (See Figure 3).

Terminal Wire Connector 1 Function

	Green	Not Connect
	White	Not Connect
ALARM	Grey	Alarm
OPEN	Yellow	To Door Remote Control Button Then Negative
D_IN	Brown	To Door Contact Then To Door In
12V	Red	(+) 12Vdc Positive Regulated Power Input
GND	Black	(-) Negative Regulated Power Input
NO	Blue	Door Strike Relay N/O
COM	Purple	Door Strike Relay COM
NC	Orange	Door Strike Relay N/C

Warning!

1N4007 is necessary, otherwise the controller doesn't work stably.

Do not plug adapter our transformer into mains until all wiring has been completed and the front cover secured.

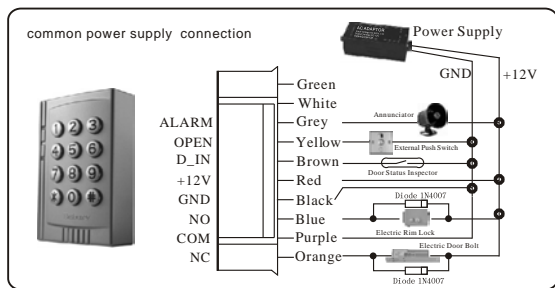


Figure 5

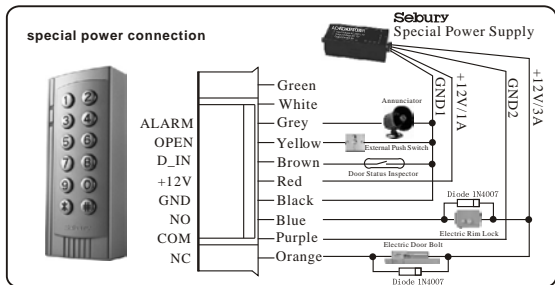


Figure 6

Note: Recommended using Seburyspecial adaptor, it will make system work more stable. The diode of 1N4007 is absolutely necessarily, or else the system will be unstable.

Power Up

After all wiring is complete and the unit faceplate is attached to the back plate, apply 12Vdc power to the unit. READY LED (the red LED) lighting on, ACCEPT LED (the yellow LED) flashing at K3. READY LED (the red LED) lighting on, ACCEPT LED (the yellow LED) flashing at K4.

Engineer Programming Mode

To enter programming mode

Press: * 9999 # within 5 seconds.

Note

Press: # to save changes and exit engineer programming, when all programming has been completed otherwise changes will not be saved.

Changing Master Codes

In engineer programming mode:

To change Master code

Press: 0 new master code # re-enter new master code #

Upon acceptance Open LED illuminates and stops flashing. Press # after changing the master code, otherwise unit will disregard the new code and revert back to the factory default code.

Note: the master code must be 4-8 digit number.

Adding User Codes & Cards

To Add User cards & codes

Press: **1** **read card** **user identification** **#**

Note: the user identification must be 3 digit number, if adding more than 1 card, read the next card after inputting the 3 digit code for the previous card, when you have finished adding all cards press the **#** key. 1st card must be 000 up to 999.

Then the K3/K4 control station added a user card it was autoadded a user code with 1234.

Delete User Card or Cards

There are 3 options to delete a user card or cards, in engineering mode.

- Press: **2** **0000** **#** to delete all user cards
- Press: **2** **read card** **#** to delete individual user card
- Press: **2** **user identification number** **#** to delete individual user card

User Operation Mode

There are 3 different options for user operation mode, card only, card and password, valid code. The option used is common to all users.

Press: **3** **00** **#** valid card only

Press: **3** **01** **#** valid card and password

Press: **3** **02** **#** valid card or password

Setting Door Relay Strike Time

The door relay output can be operated as either normally opened or normally closed, a maximum current of 3 ampere can pass

through the relay if used as normally opened or 2 ampere if normally closed. The door relay time can be set from 0 seconds to a maximum of 99 seconds. The factory default setting is 6 seconds and can be changed through the keypad.

Press: **4** **new time from 00-99 seconds** **#**

Setting Alarm Signal Output Time

Press: **5** **new time from 00-99 minutes** **#**

Setting Door Open Detection

Press: **6** **00** **#** to disable this function (factory setting)

Press: **6** **01** **#** to enable this function.

In order for this feature to work, door contacts must be connected. There are 2 programming functions that work together in this mode.

- If door not closed after opening, keypad buzzer sounds.
- If door forced open, keypad buzzer sounds and sends alarm signal.

Setting Security Arrangement

There are two levels of keypad security available for the K3/K4.

Press: **7** **01** **#** to read 10 invalid cards or valid cards, then enter 4 wrong passwords in succession, the keypad is locked for 10 minutes.

Press: **7** **02** **#** to read 10 invalid cards or valid cards, then enter 4 wrong passwords in succession, the keypad activates and alarm signal.

To disable this feature:

Press: **7** **00** **#** factory default setting.

Resetting To Factory Default Setting

To revert all settings to the factory default settings and all of the users' data will be lost.

Reset flash memory by key (see figure 4). Turn off the power, press the J3 on the PCB, and re-power the device, the K3/K4 will give a beep and is now reset to factory default values.

Changing User Password Code

The factory default setting for each user password code is 1234, this can be modified so that each user has a unique individual 4 digit code.

Press: ***** **read user card** **user password** **#** **new password** **#** **re-enter new password** **#**

Using Password Code to release the door

Press: **user password** **#**

Technical Specification

DC Supply Voltage	Low voltage input $12 \pm 10\%$ Vdc unregulated
Current Consumption	100mA @ quiescent
Door Relay	2Amp 12Vdc
Alarm output load	150mA pull current
Tamper Protection	Negative loop, normally closed
Codes	1 Master, 1000 cards and 1000 codes.
Keypad	K3 (12 keys, 3 LED status indicators) K4 (12 keys, 2 LED status indicators)
Card Types	EM or EM compatible
Induction Distance	5-10cm
Wiring Connections	Electric lock
	Remote door control
	Door open detection
	External Alarm
Memory	Non volatile Eeprom memory
Operating Temperature	-20°C to 60°C
Keypad Housing	ABS+PC
Dimensions	K3 (90mm × 60mm × 27mm)
	K4 (120mm × 50mm × 27mm)
Weight	100g

Package Listing

Name	Model no.	Quantity	Remark
Digital Keypad	K3/K4	1	
User Manual	K3/K4	1	
Cable	10Pin	1	
Security Screws	Φ3mm × 12mm	1	Used for front case and back case
Screwdriver		1	(spare)
Pastern Stopper	Φ6mm × 27 mm	4	Used for fixing
Self Tapping Screws	Φ3.5mm × 27 mm	4	Used for fixing
Diode	1N4007	1	Used for lock